



How to connect MAG250 using your WiFi connection
(step by step instructions)

1. Connect your WiFi adapter to USB port of MAG250.




2. Connect your TV set to MAG250 HDMI port using included HDMI cable.




3. Connect power supply of MAG250




4. When first time starting MAG250 and no WiFi connection is configured, please wait for couple of minutes until message “Page loading error” occurs on TV.

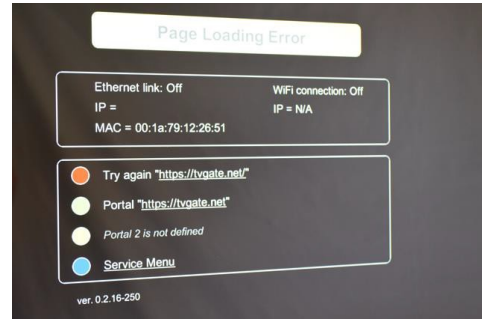


5. Press blue(F4) button on the remote control of MAG250 and wait until “System settings” window opens. Select “Network” and press OK.

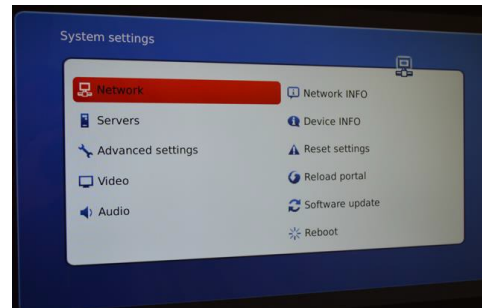


6. On appeared window “Network settings”, select “Wireless (Wi-Fi)” and press OK

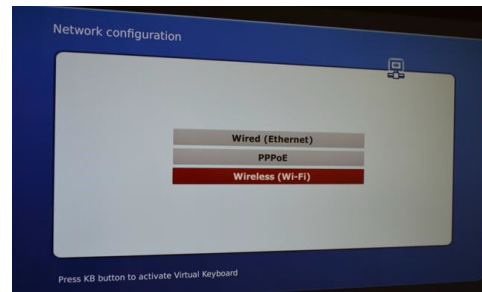


7. On “Network configuration/Wireless” window select “Auto(DHCP)” and press OK

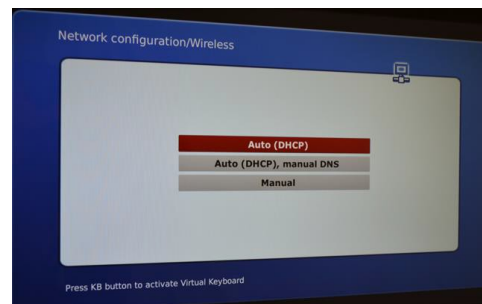


8. Now select "Scan" and press OK

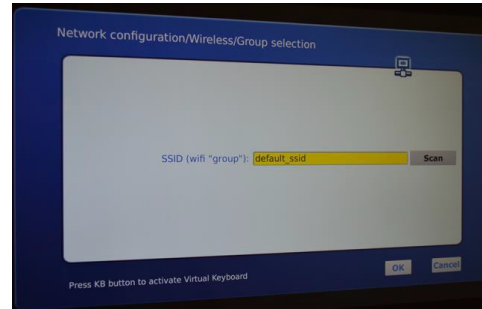


9. Select your home wireless network from appeared list and press OK

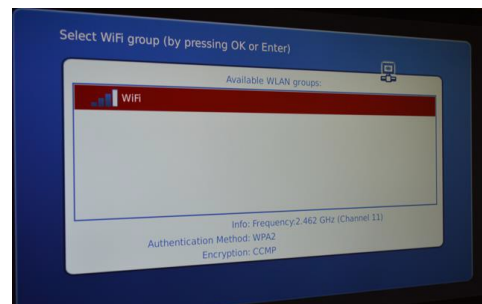


10. Enter the password of your wireless network on "Key or Passphrase" field. For this press "keyboard" button, enter password, once more "keyboard" button and then press OK

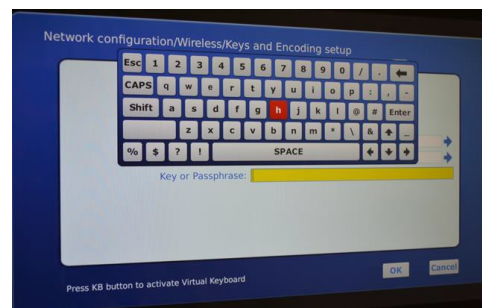


11. Wait for about 15s and check if MAG250 connected to your WiFi network: On "System settings" menu select "Network INFO" and press OK.

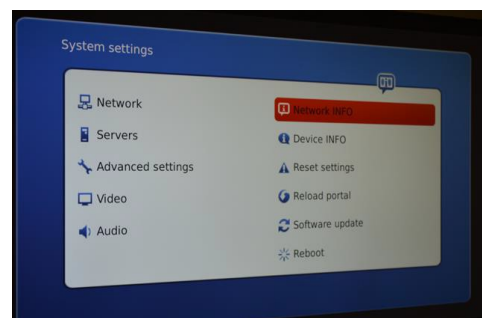

12. On “Network Information” window select “Wireless (WiFi)” and press OK.

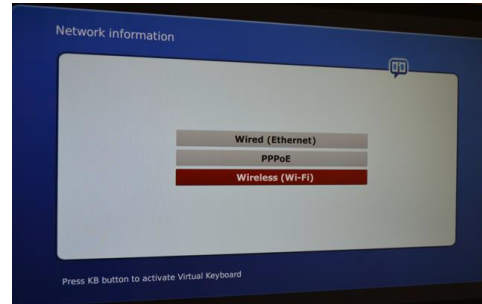

13. If all data was entered properly, you should see “Link Status: Up ”
If it says “Link Status: Down” check if you entered your password correctly(start all over from step 5)

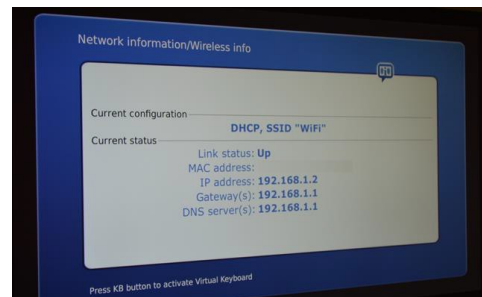

14. If WiFi connection was established correctly, press "Exit" button twice and player application will start.

